

# HELIOS TROUBLESHOOTING GUIDE

Does pump run when the timer is in the ON position?

